



This manual is applicable to AIS2003P. Unless otherwise specified in the manual, the product diagram shows AIS2003P as an example.

The side panel of the Switch provides 5-position industrial wiring terminals and power input DC. The standard voltage ranges from 48V to 57V, and the input voltage of 2 PWR1 and PWR2 power supplies ranges from 48V to 57V. The DC power input of the Switch is redundant. The PWR1 and PWR2 power supplies can be used individually or connected to 2 independent DC power supply systems. When any power supply system fails, the device can run normally without interruption, which improves the reliability of network operation.

Relay port: Alarm port, support machine abnormal alarm function. This interface needs to be connected to an external alarm device. When the machine starts abnormally or when the power is on, the internal relay will close and output the alarm signal in time, which has the function of automatic alarm, safety protection and isolation conversion in the circuit.

Chapter 3 Installation Guide

This chapter helps users correctly install and safely use Switches.

3.1 Installation Precautions

Precautions: To avoid equipment damage and personal injury, observe the following precautions:

- The Switch room should be dry and ventilated, free from corrosive gases and strong electromagnetic interference.
- The humidity of the Switch equipment room should be lower than 90%. Install proper devices when possible.
- The grounding of the Switch shall comply with the grounding requirements described in this manual, and shall be separately and well grounded.
- The Switch voltage should be stable to prevent abnormal operation of the Switch caused by power supply voltage mutation, fluctuation and other phenomena.
- Keep a proper distance between the Switch and other devices. Do not stack other devices with the Switch.
- The connection cable between the Switch and the distribution frame should be standardized and reasonable, and the distribution frame (box) jumper wire should be concise and clear to prevent the phenomenon of parallel lines and wires.
- To avoid the danger of electric shock, do not open the chassis without authorization; If any fault occurs, contact professional maintenance personnel.

⚠ Safety Tips:

- Ensure that the PGND cable of the power socket is properly grounded.
- Ensure sufficient space for heat dissipation and ventilation of the Switch. Do not place heavy objects on the Switch.

Packing List

When using the Switch for the first time, carefully open the packing box. The packing box should contain the following items:

- PoE Switch*1
- User Guide*1
- Phoenix Terminal*2
- Console Cable*1

Note: Precision devices are built in the device, please handle them carefully to avoid violent vibration, which may affect the performance of the device. If you find that the equipment is damaged or any parts are lost in the process of transportation, please inform us, we will give you a proper solution as soon as possible.

Chapter 1 Product Introduction

1.1 Product Overview

AIS2003P is a ring-network industrial-grade Managed PoE Switch independently developed by our company, providing 8*10/100/1000Mbps adaptive RJ45 ports and 4*1000Mbps Combo ports. Each RJ45 port supports MDI/MDIX automatic rollover and wire-speed forwarding. Ports 1-8 support PoE power supply. PoE ports automatically detect PD devices and supply power to PD devices that comply with IEEE 802.3af/at standards. Each port can provide up to 30W power.

The equipment supports static routing functions, provide perfect security, QoS, and plenty of VLAN function has ring network function, can form a ring network, Switch between by hand in hand form a ring network topology, the redundancy, high reliability characteristics can make in a ring online link disconnected all the way, will not affect the forwarding of data on the network.

Chapter 2 Product Appearance Description

2.1 Front Panel

Introduction of switch front panel:

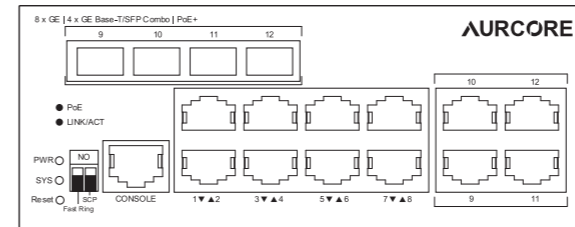


Figure 2-1 Switch front panel diagram

➢ 10M/100M/1000Mbps RJ45 Ports

Support 10M/100M/1000Mbps rate adaptation function, support Auto-MDI/MDIX function. Each port has a corresponding indicator light, namely the port 1-8 indicator light shown in the panel above.

➢ 1000Mbps SFP Slots

SFP An independent port, each port has a corresponding indicator, corresponding to the indicator of port 9T/S-12T/S on the panel in the previous figure.

➢ Console Port

The Console port is used to connect to the serial port of the computer or other terminal equipment and to manage or configure the switch.

➢ Reset Switch

Reset switch is simply a switch that can be automatically reset. After long press 5s, release it to restore the factory settings.

➢ SCP

One-touch broadcast storm suppression: limits broadcast packets, unicast packets, and multicast packets to a certain rate.

Fast Ring

To enable the ERPS function, set the last 2 SFP slots as the sub-network ports of the ring network.

3.2 Installation Environment

Before installation, make sure that the proper working environment is available, including power requirements, adequate space, proximity to other equipment to be connected, and other equipment in place. Please confirm the following installation requirements:

- Ensure the stability of the workbench and good grounding;
- Check whether cables and connectors required for installation are in place (less than 100m);
- The product does not provide installation components. Prepare components of the selected installation type, such as screws, nuts, and tools, to ensure reliable installation;
- Power supply: 48V to 57V dc power supply;
- Environment: operating temperature: -40°C to 75 °C (-40 °F ~167°F) relative humidity: 5% to 95%.

3.3 Installation

DIN-Rail Installation

The 45mm standard DIN-Rail installation is very convenient for most industrial applications. The installation steps are as follows:

- Check whether the installation accessories of DIN-Rail guide tools are available (installation accessories are provided for this product);
- Check whether DIN-Rail is firmly fixed, whether there is a suitable place to install the product;
- Clamp the lower part of the DIN-Rail connecting seat of the product accessories into the DIN-Rail (lower part with spring support), and then clamp the upper part of the connecting seat into the DIN-Rail (lower part clamp a little, slightly force to keep the balance of the equipment stuck into the upper part).

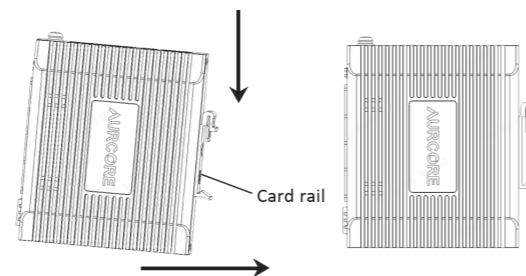


Figure 3-1 Schematic diagram of industrial machine guide rail installation

Note: Aluminum alloy DIN-Rail hooks have been fixed to the rear panel of the Switch.

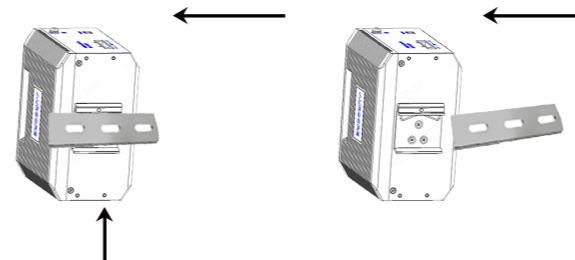


Figure 3-2 Schematic diagram of industrial machine guide rail disassembly

⚠ Power on

- Power on: First insert the power terminal of the power cable into the power port of the device, then plug in the power plug and power on. After the Switch is started, the Switch automatically initializes. If all port indicators are on and then off, the system is successfully reset, and the power LED indicator is always on.
- Power off operation: Unplug the power plug first, and then remove the wiring part of the terminal. Please pay attention to the above operation sequence.

2.2 LED Indicator

The LED indicator light of the switch is shown in the following table. Users can easily and quickly monitor the work and operation status of the switch through the following indicator light:

LED	Color	Function
PWR	Green	Off: No Power supply. Light: Indicates the Switch has power.
DATA	Green	Off: No device is connected to the corresponding port. Light: Indicates the link through that port is successfully established at 10/100/1000Mbps. Blink: Indicates that the Switch is actively sending or receiving data over that port.
SYS	Green	Blinking: The system is working properly. Off or always on: The system is being started or is abnormal.
PoE	Orange	Off: No PoE powered device (PD) connected. Light: There is a PoE PD connected to the port, which supply power successfully. Blink: Indicates port abnormal PoE supply.

2.3 Side Plate


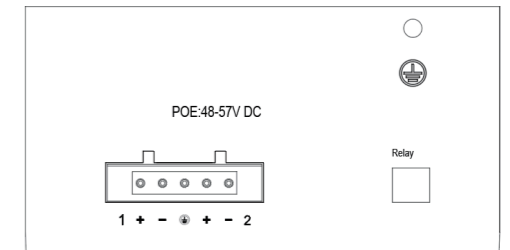


Figure 2-3 AIS2003P side panel

Wall mounted installation

The following describes how to install a Switch on the wall:

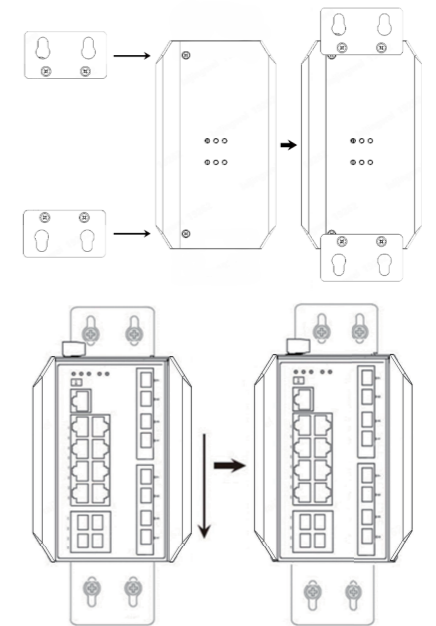

Schematic diagram of wall mounted installation of industrial machine

- Remove the DIN-Rail mounting plate on the rear board of the Switch;
- Install the wall mounting board on the Switch as shown below.
- Four wall screws are required to mount the Switch on the wall, as shown in the figure above.
- When fixing the screws to the wall, do not screw the screws into the wall completely. Leave a space of about 2 mm for sliding the wall panel between the wall and the screws.
- After securing the screws to the wall, place the 4 screw heads through most of the keyhole, then place the Switch vertically and tighten the screws to increase stability.

Appendix: Technical Specifications

Model	AIS2003P
Standard	IEEE 802.3, IEEE 802.3u, IEEE 802.3ab, IEEE 802.3z, IEEE 802.3x, IEEE 802.1x, IEEE 802.1q, IEEE 802.1p, IEEE 802.1d, IEEE 802.1w, IEEE 802.3ad, IEEE802.3af, IEEE802.3at
Network Media (Cable)	10BASE-T: UTP category 3,4,5 cable (≤100m) 100BASE-TX: UTP category 5, 5e cable (≤100m) 1000BASE-T: UTP category 5e, 5 cable (≤100m) 1000BASE-X: MMF, SMF
MAC Address Table	8K, Auto-learning, Auto-updating
Transfer Mode	Store-and-Forward
Packet Buffer	4.1Mbit
Packet Forward Speed	17.86Mpps
Input Power Supply	DC:48-57V
Switching Capacity	24Gbps
Dimensions (L*W*H)	145*109*62mm
Fan	Fanless
PoE Power Budget	185W
PoE Port	Port 1~8
PoE Power On RJ45	Mode A 1/2 (-), 3/6(+)
PoE Output	30W(Max)
Temperature	Operating Temperature: -40°C ~ 75°C (-40 °F ~167°F) Storage Temperature: -40°C ~ 80°C (-40 °F ~176°F)
MTBE	>100000 hours